

# INSTALLATION INSTRUCTIONS

Accessory

**FENDERWELL TRIM**  
**P/N 08P21-S6M-200**

Application

**2003 RSX**

Publications No.


**BII 24450**

Issue Date


**SEP 2002**

## PARTS LIST


Left front fenderwell trim

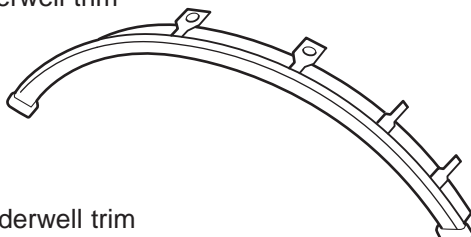


Right front fenderwell trim

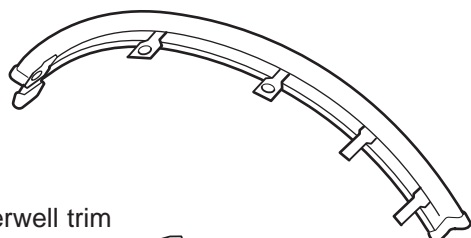


Left rear fenderwell trim

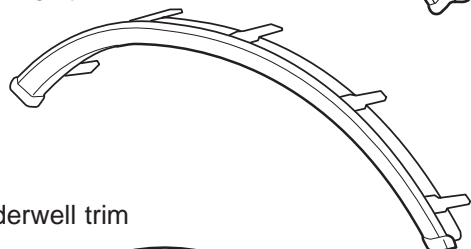

Right rear fenderwell trim

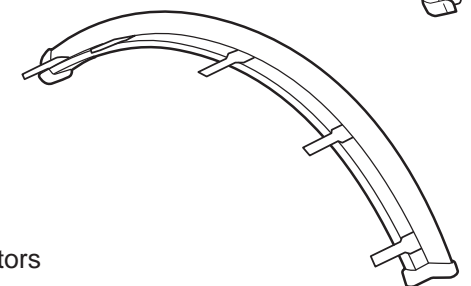

2 Inner protectors

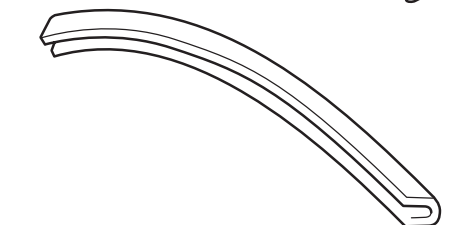

## TOOLS REQUIRED

Flat-tip screwdriver

Pliers

Rubber mallet

Shop towel


## INSTALLATION

### NOTE:

- These instructions show the right fenderwell trim being installed. The same procedure applies to installing the left fenderwell trim.
- The fenderwell trim is identified by a label attached to the inside surface.


### Installing the Front Fenderwell Trim

1. Remove the three expansion clips and two self-tapping screws that secure the inner fender.

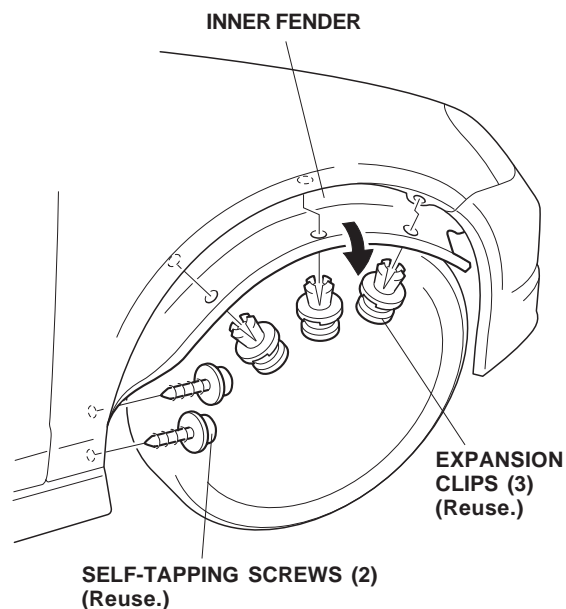

2. Clean the area to be covered, and wax it with a high-quality paste wax.


3. Pull the inner fender down, and position the fenderwell trim between the inner fender and the fender flange. Align the fenderwell trim with the front bumper as indicated by the arrow.

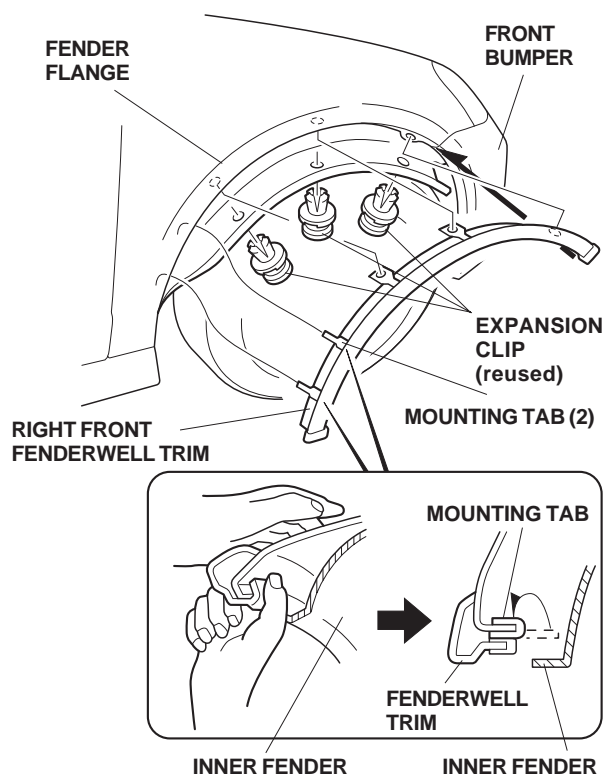


4. While holding the fenderwell trim firmly against the fender, squeeze the two mounting tabs around the fender flange as shown. If necessary, use pliers over a shop towel to bend the mounting tabs around the fender flange.
5. Attach the front of the fenderwell trim and the inner fender to the front fender with the three expansion clips removed in step 1.
6. Reinstall the two self-tapping screws removed in step 1.
7. Repeat steps 1 through 6 to install the left front fenderwell trim.

## Installing the Rear Fenderwell Trim

8. Position the right rear fenderwell trim on the fender flange, and align the rear of the fenderwell trim with the rear bumper. Hold the fenderwell trim firmly against the fender; then bend the five mounting tabs around the fender flange.

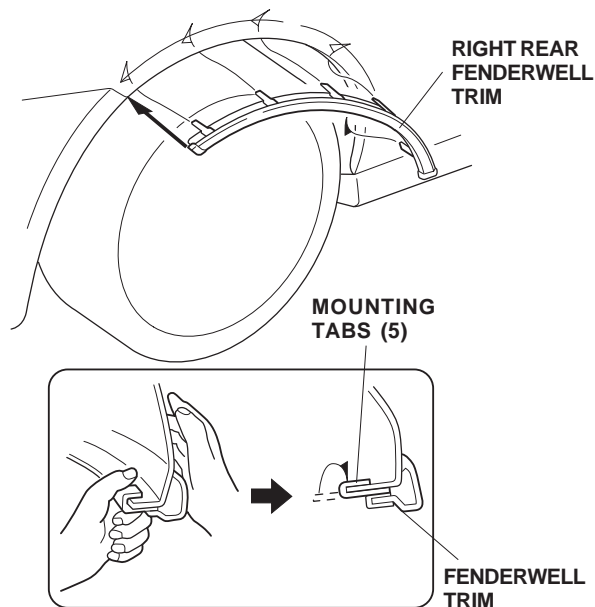

9. Lubricate the inner protector with soapy water, then drive it over the fender flange and fenderwell trim using a rubber mallet.

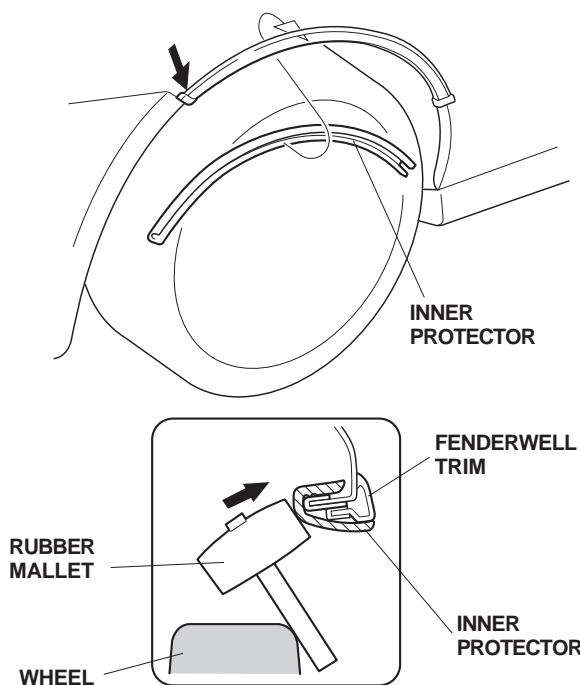

10. Repeat steps 8 and 9 to install the left rear fenderwell trim.